





Adjuster Handle Installation Instructions

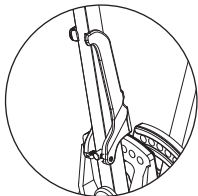


Step 1: Snap on the Adjuster Handle:

Place the adjuster handle over the pedal crank as shown.

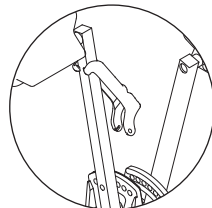


Step 2: Insert the Spring:


Insert the spring between the adjuster handle and the crank.

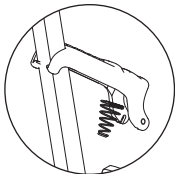

The large end of the spring sits on this recessed circular pad.

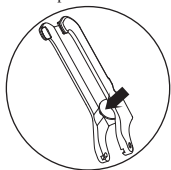


Push the handle onto the crank arm and slide down as shown here. Make sure the spring stays in the recess and doesn't come out.

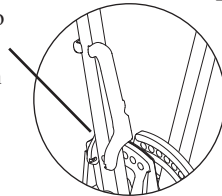


Step 3: Insert the Adjuster Pin:

Insert the adjuster pin into the hole on the pedal crank.

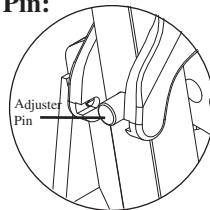


Step 4: Insert the Adjuster Pin:

Start threading the screw through the hole on the side of the adjuster handle. The screw needs to pass through the hole in the adjuster pin.

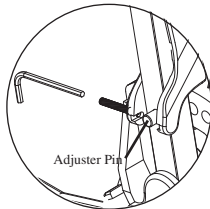

Continue to thread in the set screw into the plastic on the other side of the adjuster handle. Keep a little pressure on the adjuster arms by squeezing in a little (see arrows). This will prevent the set screw from pushing the arms apart. A small bump may form on the outside surface of the handle. The screw does not need to push through the other side!

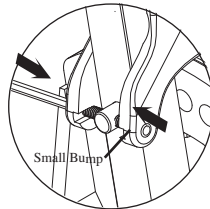

Repeat these instructions for the other side.

