


#1528 - BATTEN TENSIONER

Instructions

1. Insert batten so that luff end is snug in batten pocket protector. Extreme pressure is not required.
2. Measure $\frac{1}{2}$ " to $\frac{5}{8}$ " back from sail leach, mark batten, and trim batten to new length at mark.
3. Retract adjustment screw on batten tensioner until tensioner pad (slide) is snug against tensioner base.
4. Install hooks on sail grommets per drawing and compress to desired shape.

For repeatable batten tension setting install draft gages on you battens. Ask for part number 1541 (H14), 1542 (H16) & 1543 (H18).

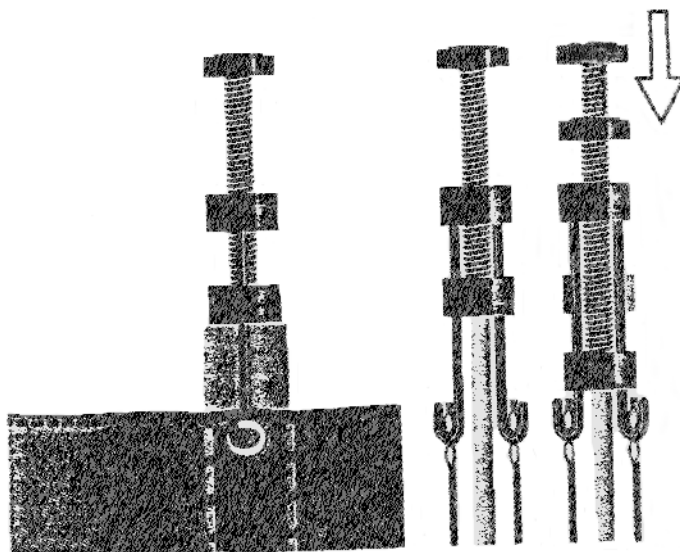

#1528 - BATTEN TENSIONER

Instructions

1. Insert batten so that luff end is snug in batten pocket protector. Extreme pressure is not required.
2. Measure $\frac{1}{2}$ " to $\frac{5}{8}$ " back from sail leach, mark batten, and trim batten to new length at mark.
3. Retract adjustment screw on batten tensioner until tensioner pad (slide) is snug against tensioner base.
4. Install hooks on sail grommets per drawing and compress to desired shape.

For repeatable batten tension setting install draft gages on you battens. Ask for part number 1541 (H14), 1542 (H16) & 1543 (H18).

