 
 
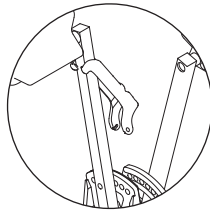 


Step 1: Snap on the Adjuster Handle: Place the adjuster handle over the pedal crank as shown.

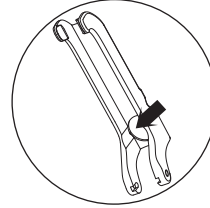

**Adjuster Handle
Installation Instructions**


Step 2: Insert the Spring: Insert the spring between the adjuster handle and the crank.

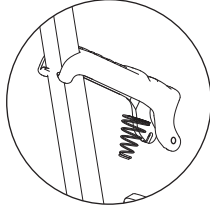


The large end of the spring sits on this recessed circular pad.

Step 3: Insert the Adjuster Pin:


Insert the adjuster pin into the hole on the pedal crank and slide the screw through the adjuster handle and adjuster pin.

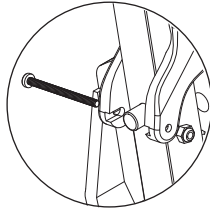



Tighten the nut on the end of the screw until the screw threads are just poking out the other side of the nut. It does not need to be tight!

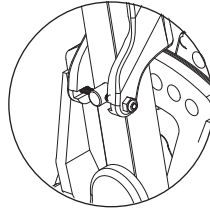


Follow the same instructions for the other side.

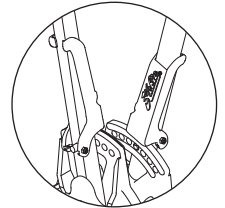

To adjust- squeeze the handle, move the pedal and release the handle. Make sure the pin drops into the new hole.

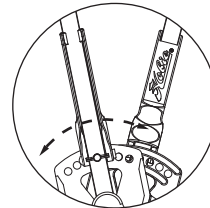
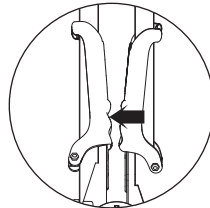


Step 1: Snap on the Adjuster Handle: Place the adjuster handle over the pedal crank as shown.

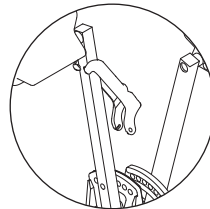

**Adjuster Handle
Installation Instructions**


Step 2: Insert the Spring: Insert the spring between the adjuster handle and the crank.

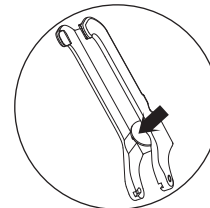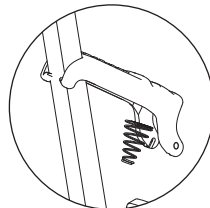


The large end of the spring sits on this recessed circular pad.

Step 3: Insert the Adjuster Pin:


Insert the adjuster pin into the hole on the pedal crank and slide the screw through the adjuster handle and adjuster pin.

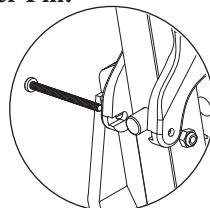

Tighten the nut on the end of the screw until the screw threads are just poking out the other side of the nut. It does not need to be tight!

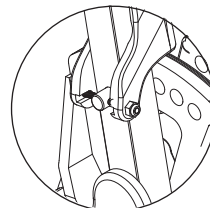

Follow the same instructions for the other side.

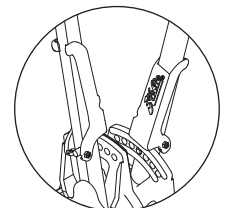

To adjust- squeeze the handle, move the pedal and release the handle. Make sure the pin drops into the new hole.

