


## Installation

- 1) Hang the Harken 230 micro cleat (jaws upside down) from the tack grommet using the D shackle provided.
- 2) Install the sheave into the slot on the right side of the mast base. You should now have three sheaves in a row across the base. The center one for the halyard and the outer two for the downhaul system.
- 3) Check that the existing small bullet block is installed on the right side tab of the mast base.
- 4) Stick the downhaul scale to the side the mast where it will best identify different adjustments to you.
- 5) Tie the downhaul line to the becket of the harken cleat. THEN...

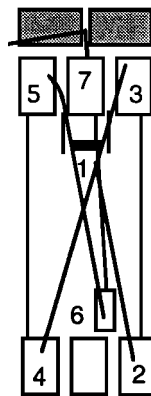

- o Pass the line thru the right base sheave from aft toward forward
- o Pass the line thru the right cleat sheave from forward toward aft
- o Pass the line thru the left base sheave aft toward forward
- o Pass the line thru the left cleat sheave from forward toward aft
- o Pass the line thru the small bullet block aft toward forward
- o Pass the line up over the center cleat sheave from forward to aft and out through cleat jaws