

Note - Read all instructions prior to installing luff tack.


1. Remove the main halyard from the mast.
2. Remove the luff tack from the comptip by prying out one side to get it started. (use blade screw driver.)  
-Caution- When prying. Use a minimum up and down motion, it is easy to damage the comptip grooves if too much force is used (then pull off by hand).
3. Install the aluminum luff track by following the alpha and diagrams below.

Note- Only sand on (surface-A) if necessary.

(A) Place aluminum luff track on comptip as shown.

(B) Apply pressure at both ends of track where arrow indicates.

-Caution- Do not use a mallet to force inplace. This can damage the track, examin (surface-A) and remove bumps and burrs. Putting wax on the comptip grooves and the track ears will also aid in snapping the track inplace.

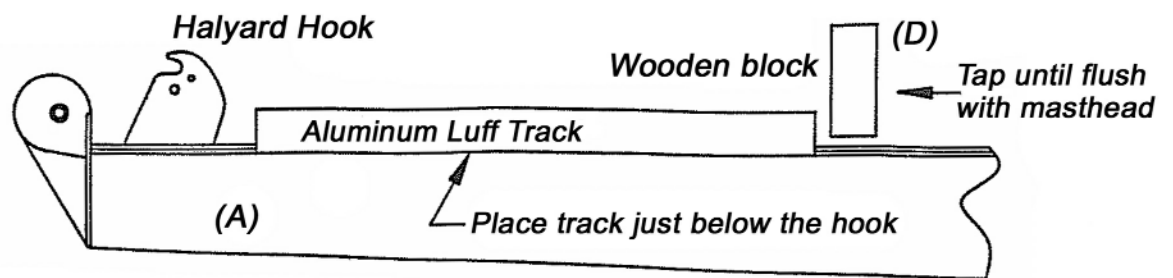

(C) Once inplace lightly tap ears as shown to insure they are in all the way.

(D) If needed, tap end of luff track until flush with masthead, use a wooden block between the aluminum track and mullet while hammering to keep from damaging the track.

4. Measure, cut and deburr plastic luff track and reinstall on the comptip. (Figure 4.1)

-Note- Be sure that both ends of plastic track are flaired as joints with aluminum track top and bottom.

5. Reinstall the main halyard.

