


Rudder re-drill Template

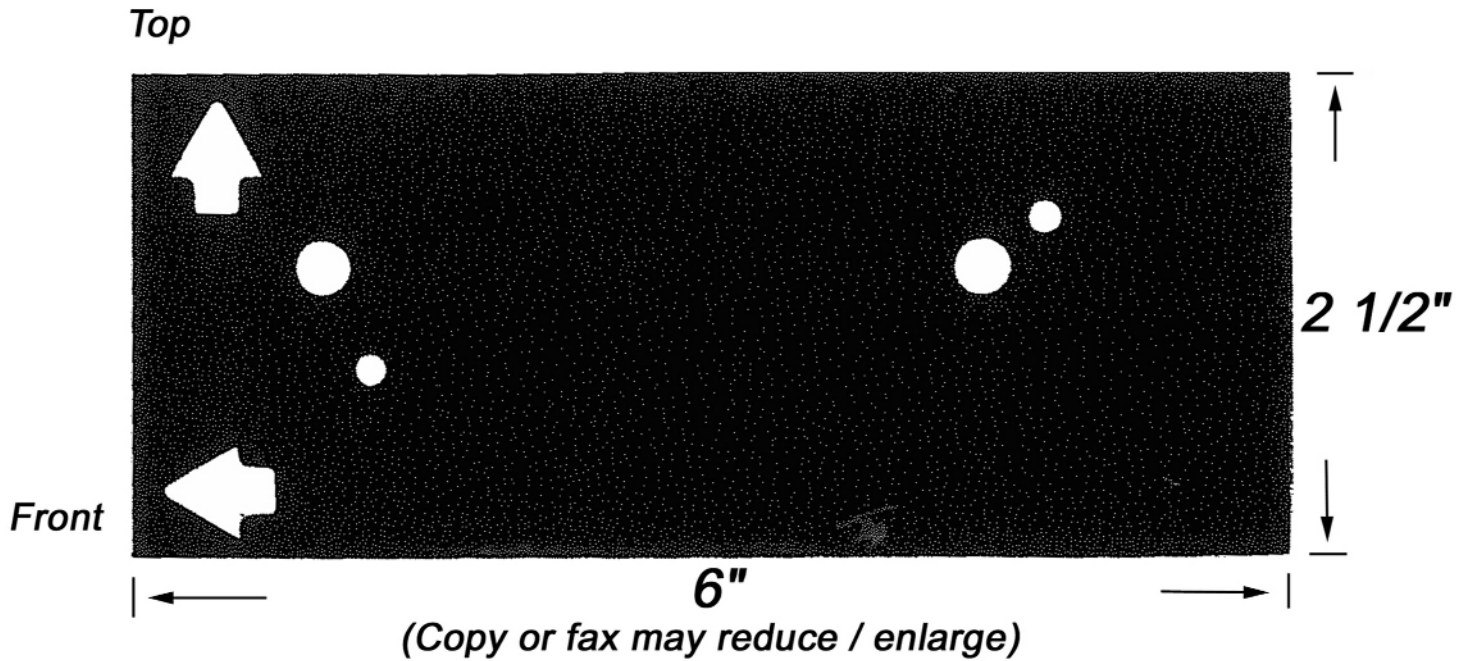

A - Line up existing bolt holes with larger holes in template.

B - Mark then drill at small hole locations with a 5/16" bit.

