


Hobie®  
Anchor Trolley  
Installation



Please read through the instruction manual before using this product.

This is a universal kit and features parts to allow assembly on all Hobie kayaks excluding inflatables. Some hardware may go unused depending on kayak type.


1. 3/16" Trolley Line
2. Screw, 10-32 X 1 1/2" Pan
3. Screw, 10-32 X 1" Pan
4. Washer, #10 X 1"
5. Nut, #10 Nylock
6. Well Nut Assembly
7. Screw, 10-32 X 3/4" Flat
8. Screw, 10-32 X 1/2" Pan
9. Eye Post Assembly
10. Cheek Block Assembly
11. Loctite®
12. Shock cord with Ring Assembly

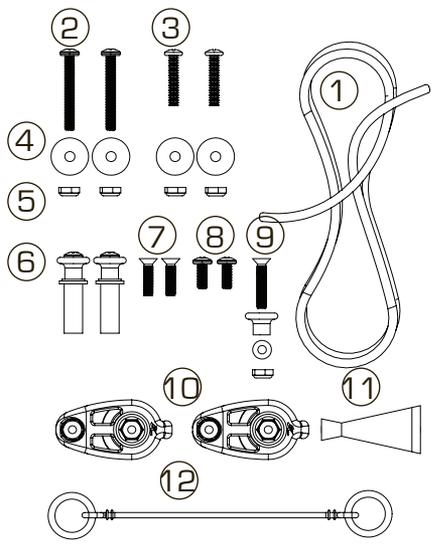


This manual will show the anchor trolley kit being installed on the left-hand side of the kayak, but it can be put on the right-hand side if preferred.

① Pro Angler Installation


If installing on a Pro Angler, remove plugs from the boat by carefully prying off with a screwdriver. **IF YOUR PRO ANGLER DOES NOT HAVE INSERTS, FOLLOW KAYAK INSTALLATION ON PG 5.**

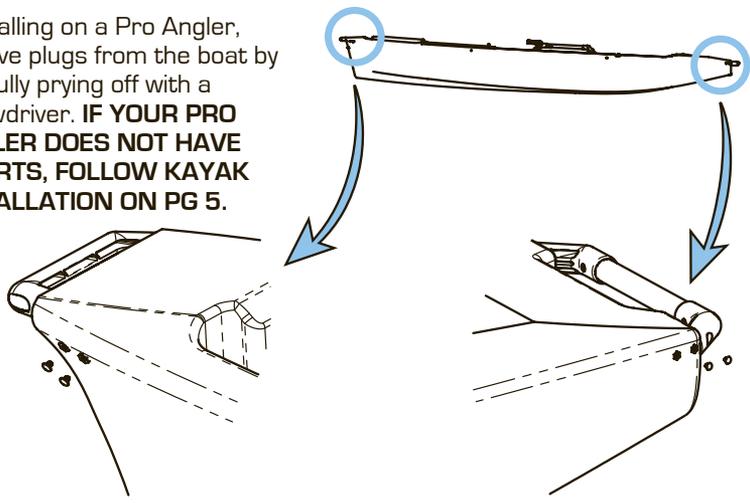

②

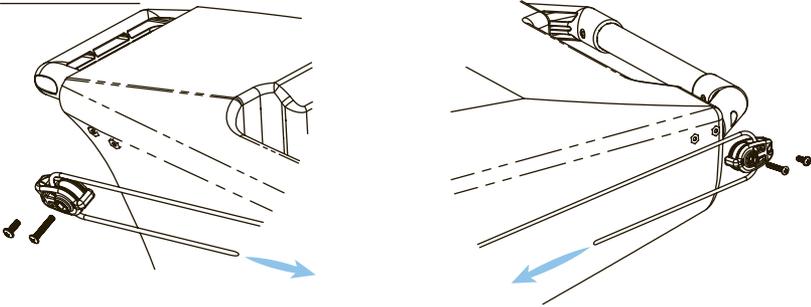

Install cheek blocks to boat using the 1" and 1/2" screws. Make sure the blocks are facing inwards. Feed the Trolley Line through the top of the blocks and exit the bottom. Tie each end of the line to the rings on the shock cord. The shockcord assembly should travel on the bottom trajectory. Make sure there is tension in

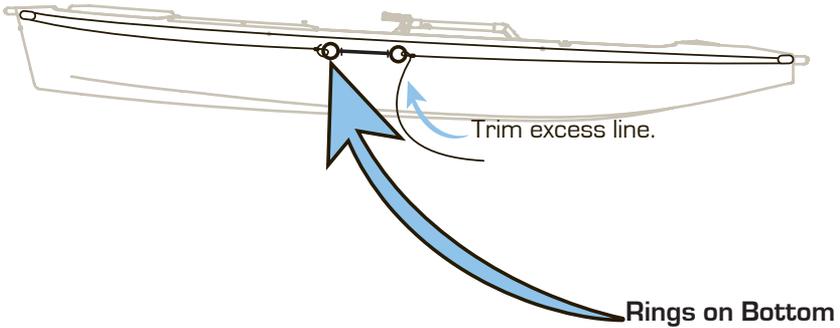


③



Check the areas circled in the diagram to the right. If you have a hexagon brass piece exposed, pry off the plastic caps and skip to the next step. If you don't have the brass parts, continue with the instructions below.




If you have two molded inserts on the side of your boat, mount the eyelet posts to the inserts. You will need to take apart the well nut assembly and use the eye post provided. Use the 10-32 X 3/4" Flathead screw. Place a drop of Loctite on the threads.

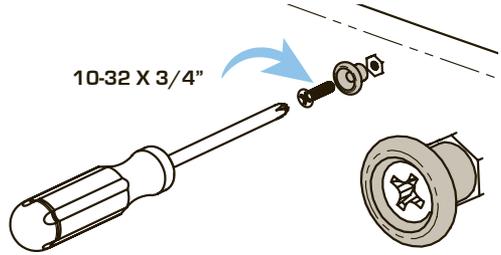



④

Thru-bolt one of the eyelet posts near the back of the mounting board using the provided screw, nut and washer. The mounting hole must be drilled using a 3/16" drill bit. Use the illustration below for reference.

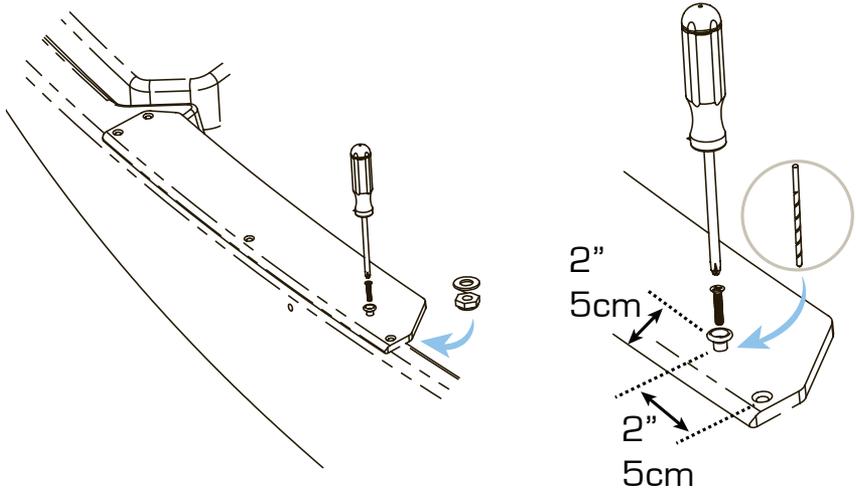

## ⑤ Standard Kayak Installation



If installing on a standard Hobie Kayak or a Pro Angler that does not have inserts, find the two cheek blocks and set them approximately 12" from the bow and the stern. Drill two 3/16" holes for the hardware that will hold the cheek blocks in place. **THE BLOCKS SHOULD BE LOCATED ABOVE THE WATERLINE.**

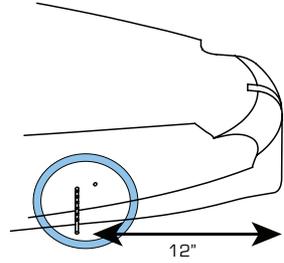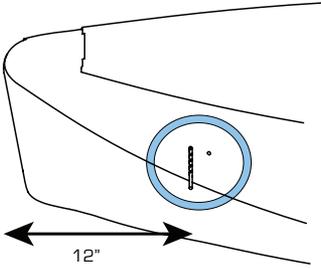


## ⑥

Once the holes are drilled, fasten the cheek blocks onto the kayak with the correct hardware; Use the hatches on the bow and stern to access the screws when thru-bolting. Make sure the blocks are facing inwards.


- 2, Screw 10-32 X 1"
- 2, Screw 10-32 X 1 1/2"
- 4, Washer #10 X 1"
- 4, Nut #10 Nylock

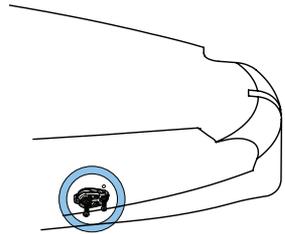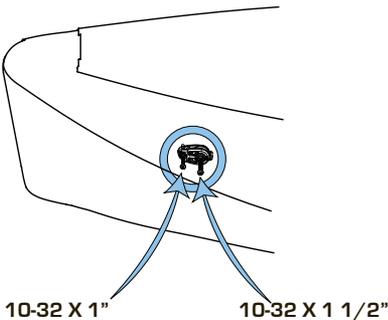

Fasten both blocks to the bow and stern.

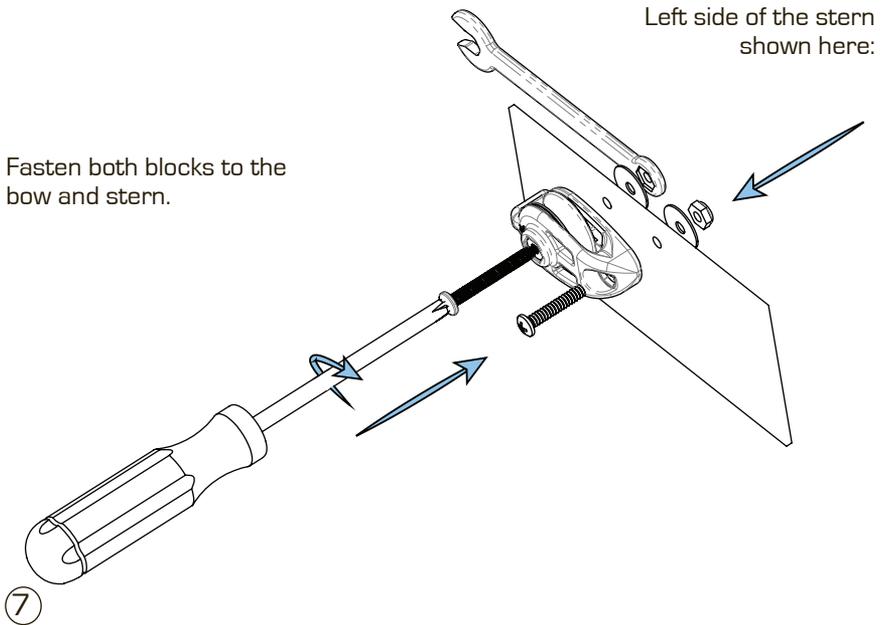


Feed the Trolley Line through the top of the blocks and exit the bottom. Tie each end of the line to the rings on the shock cord. The shock cord assembly should travel on the bottom trajectory. Make sure there is tension in the bungee when tying to the trolley line.

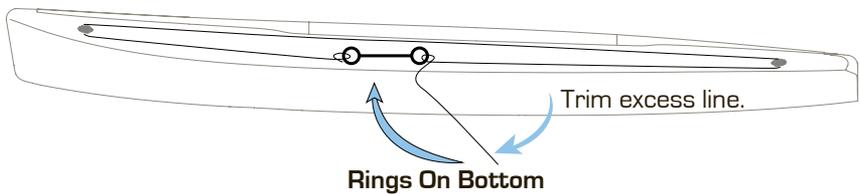


⑧

Use the mounted eyelet posts to tuck the trolley line underneath and keep it out of your way.


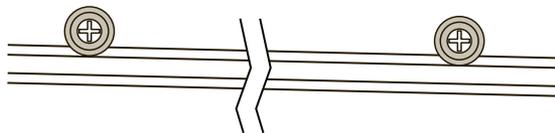


For Pro Anglers without inserts, drill two 3/8" holes per the diagram below.

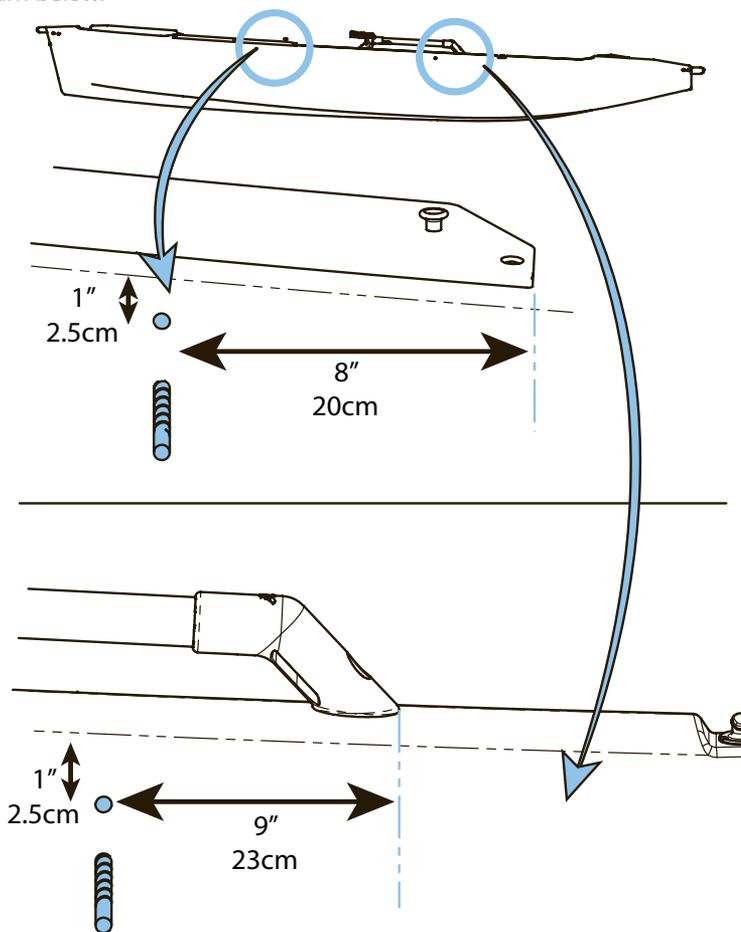


⑨

For kayaks without inserts, drill two 3/8" holes per the diagram below. The ledges on the side of the kayak used to hold the paddle make for an ideal location for the eye post/well nut assembly.

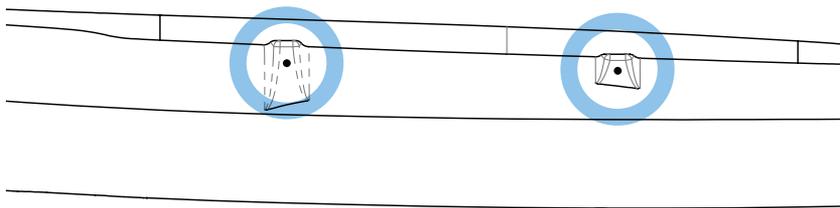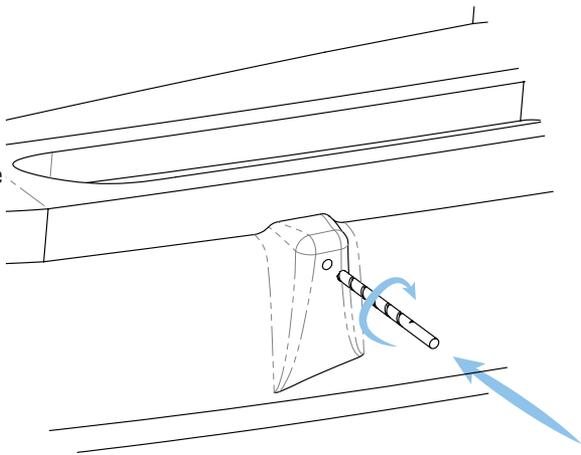


**BE SURE TO DRILL HOLES THAT WILL ALLOW THE EYEPOST TO BE FIXED ABOVE THE TROLLEY LINE.**

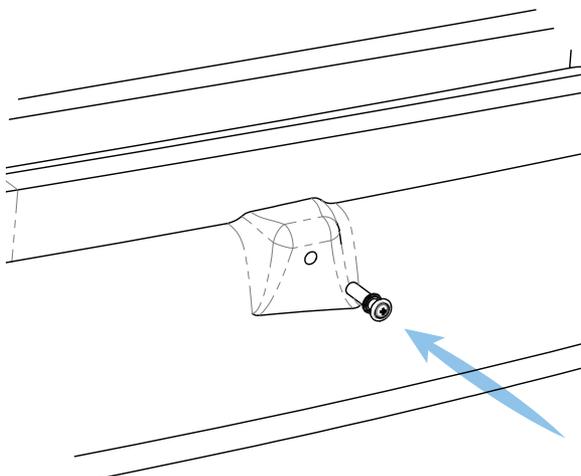


⑩

Install the well nut assemblies into the two 3/8" holes you drilled.

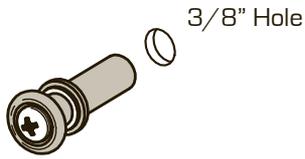


⑪

By turning the screw, the well nut expands to fasten the eyelet post and provide a watertight seal. Turn the screw until the eyelet post is firmly mounted. **OVER TIGHTENING WILL RESULT IN DAMAGE TO THE WELL NUT.**

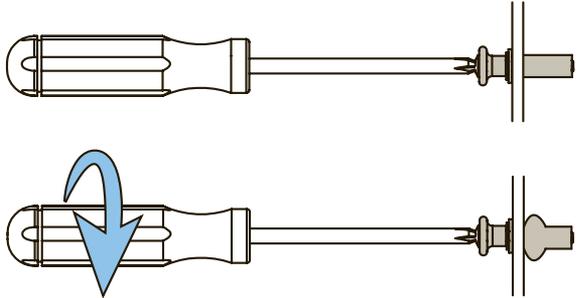


Attach your anchor point to the rear-most ring and move the trolley back to drift facing downstream/downwind.

Attach your anchor point to the forward-most ring and move the trolley forward to drift facing upstream/upwind.

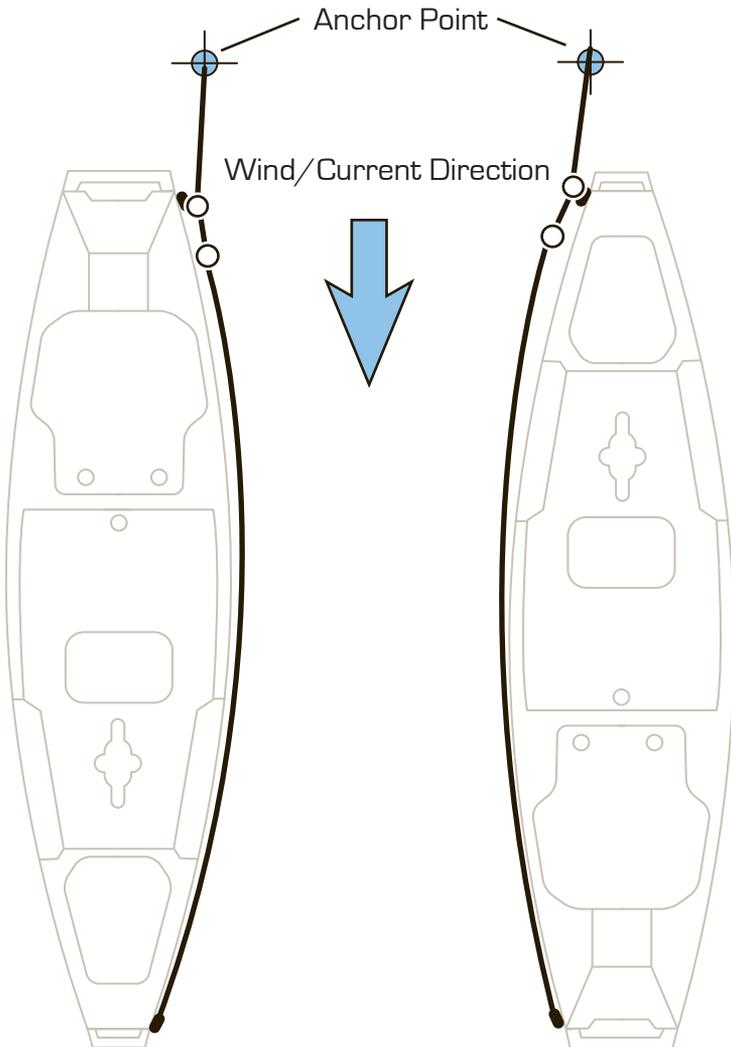

To drift sideways, slide the trolley to the middle then loop the top trolley line over the eyelet post screwed to the mounting board.

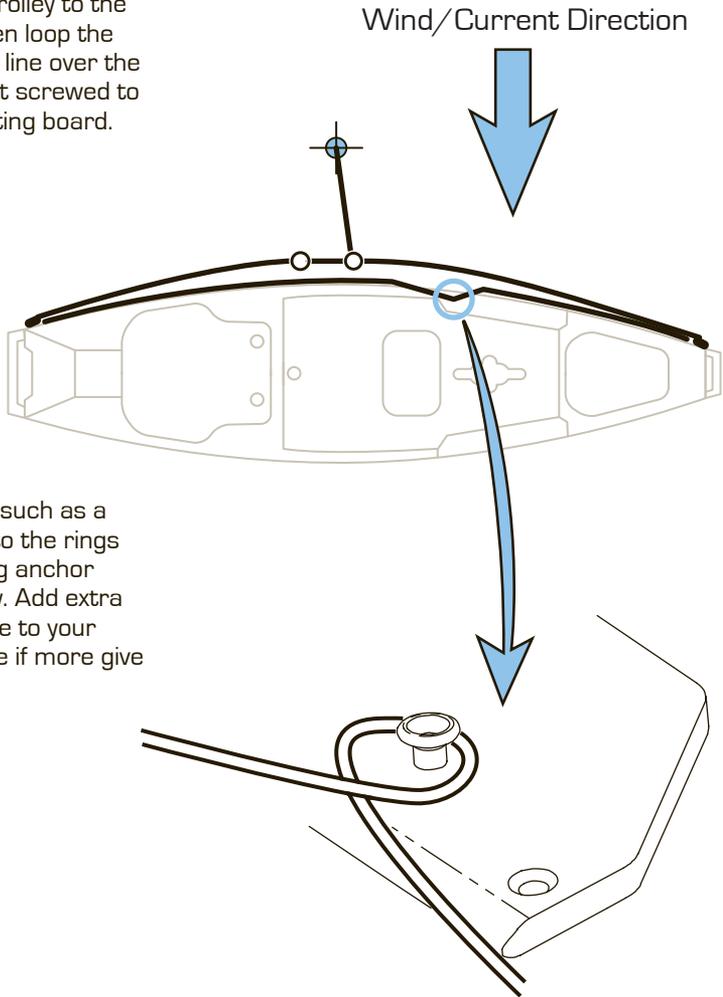

#### Tips:

Add a clip such as a carabiner to the rings for running anchor lines freely. Add extra bungee line to your anchor line if more give is desired.

## Maintenance

Over time, the line will stretch and slacken on the sides of the boat. Tighten up the lines periodically to keep the trolley system taut.



Hobie Cat Company  
Oceanside, California, USA  
1-800-HOBIE-49  
hobiecat.com

Hobie Cat Australasia  
Huskisson, New South Wales, Australia  
1-800-4-HOBIE  
hobiecat.com.au

Hobie Cat Europe  
Toulon, France  
+33(0)494 08 78 78  
hobie-cat.net

Hobie Kayak Europe  
Stellendam, The Netherlands  
+31(0)187 499 440  
hobie-kayak.com

Hobie Cat Brazil  
Bahia  
Brazil  
+55 (73) 9982 2424  
hobiecat.com.br

PN 72020073  
REV 130828