



Hobie MirageDrive Alignment Pin Installation Instructions

1. Locate the hole on the bottom of the drive's spine. Align the KEY slot on the drive with the KEY feature on the pin and fully press in the pin. You may need to lightly tap in the pin with a hammer.

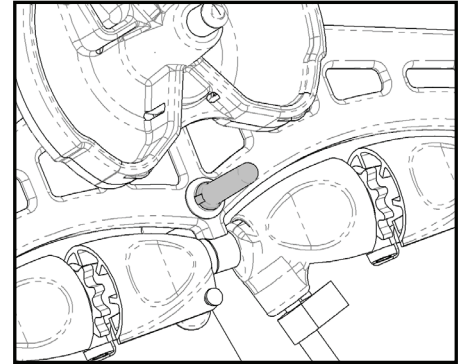

2. With the pin fully pressed in, grip the pin with a pair of pliers and rotate the pin 180 degrees. By turning the pin, the KEY feature on the pin no longer aligns with the KEY slot, locking the pin and keeping it from coming out.

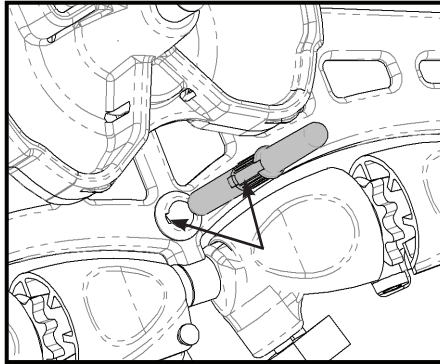